




Breakdown and Part list
Schéma et le liste de pièce

Vibratory Plate / Plaque vibrante
(VP93)



Tel.: 1-877-405-2626, Fax: 1-877-405-8686
web site: www.cm-equip.com
e-mail: info@cm-equip.com


Vp93 Major Components

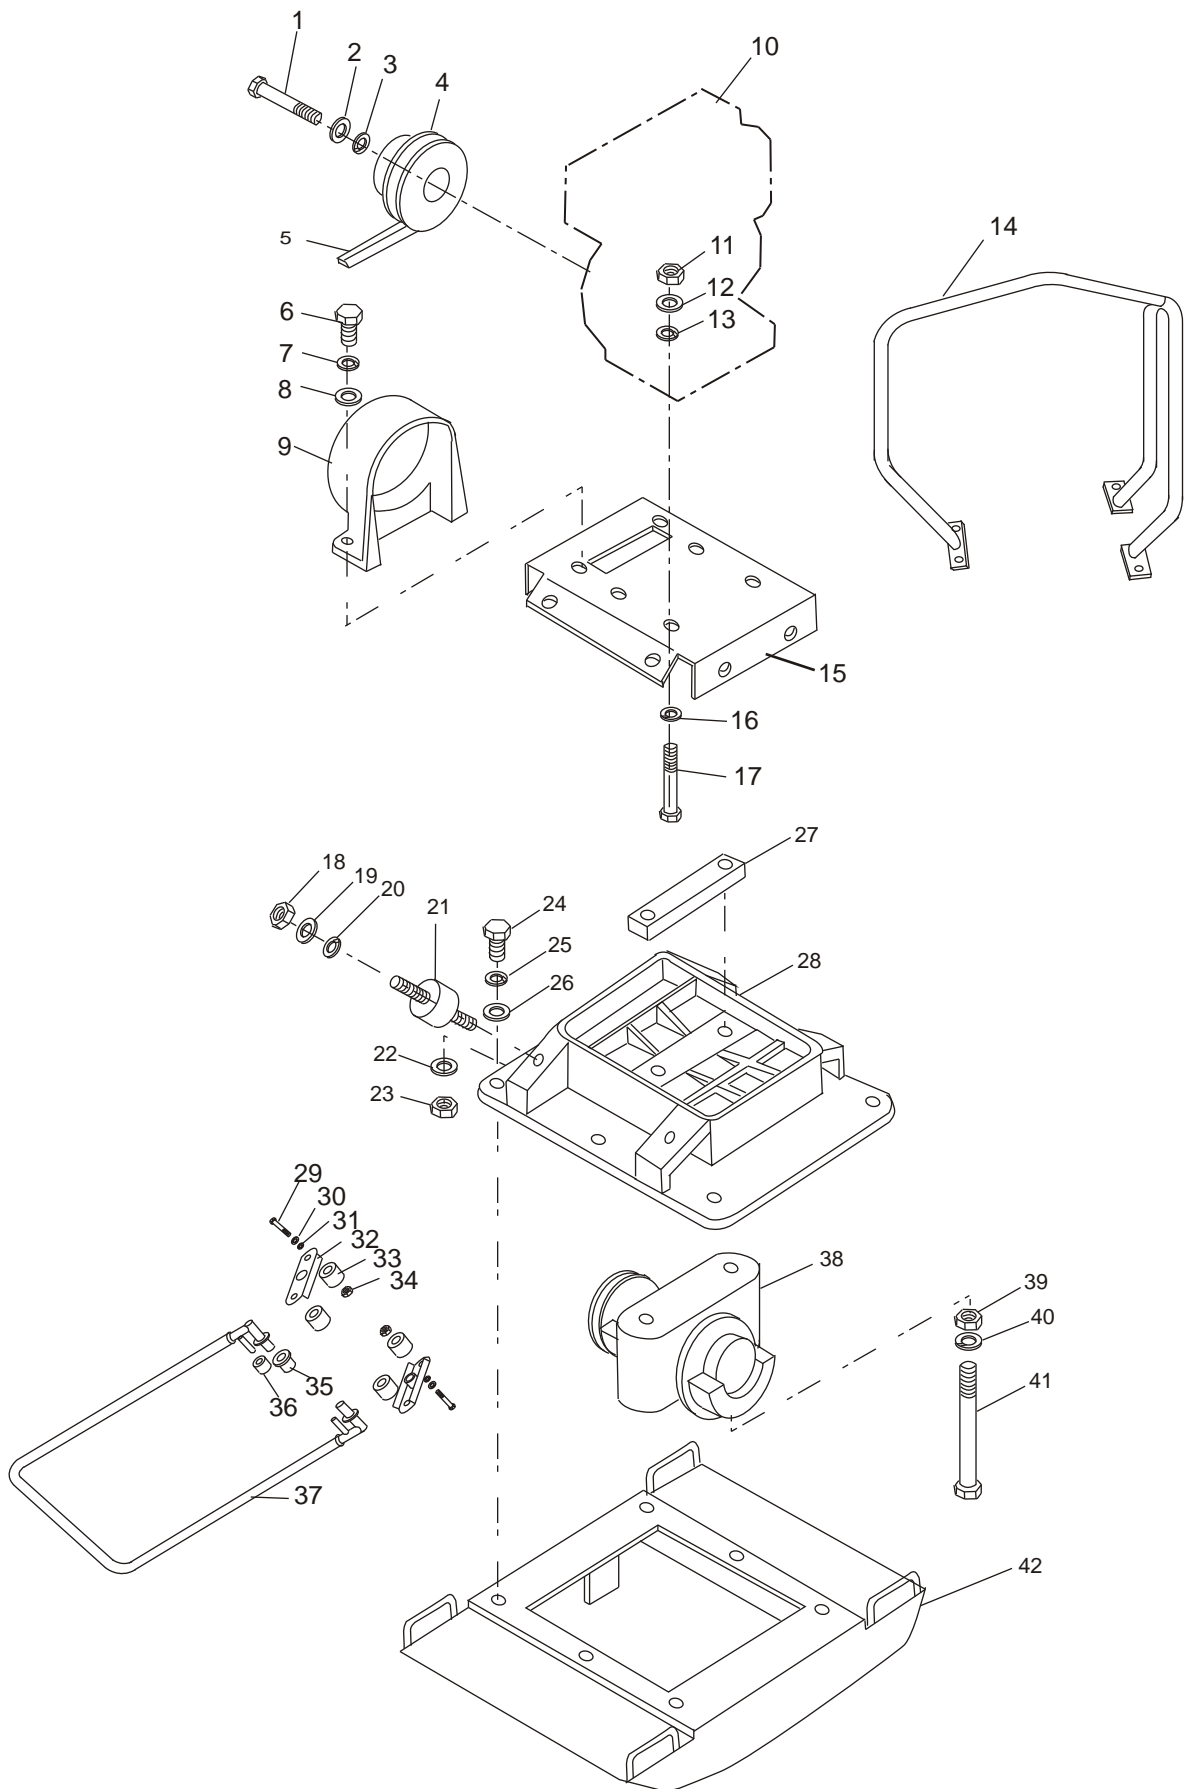

VP93 Major Components

No.	Parts
VP93-01	Hexagonal bolt M8x25
VP93-02	Washer, lock M8
VP93-03	Washer, plate M8
VP93-04	Clutch assembly
VP93-05	V-belt
VP93-06	Hexagonal bolt M8x20
VP93-07	Washer, lock M8
VP93-08	Washer, plate M8
VP93-09	Belt cover
VP93-10	Engine
VP93-11	Nut M8
VP93-12	Washer, plate M8
VP93-13	Washer, lock M8
VP93-14	Guard hook
VP93-15	Base
VP93-16	Washer, plate M8
VP93-17	Hexagonal bolt M8x40
VP93-18	Nut M10
VP93-19	Washer, plate M10
VP93-20	Washer, lock M10
VP93-21	Shock absorber
VP93-22	Washer, lock M10
VP93-23	Nut M10
VP93-24	Hexagonal bolt M12x45
VP93-25	Washer, lock M12
VP93-26	Washer, plate M12
VP93-27	Beam
VP93-28	Vibrator support
VP93-29	Hexagonal bolt M10x80
VP93-30	Washer, lock M10
VP93-31	Washer, plate M10
VP93-32	Plate, handle setting
VP93-33	Shock absorber
VP93-34	Nut M10
VP93-35	Rubber
VP93-36	Rubber
VP93-37	Handle
VP93-38	Vibrator assembly
VP93-39	Nut M16
VP93-40	Washer, lock M16
VP93-41	Hexagonal bolt M16x150
VP93-42	Vibrating plate
VP93-43	Engine plate

VP93 Vibrator assembly

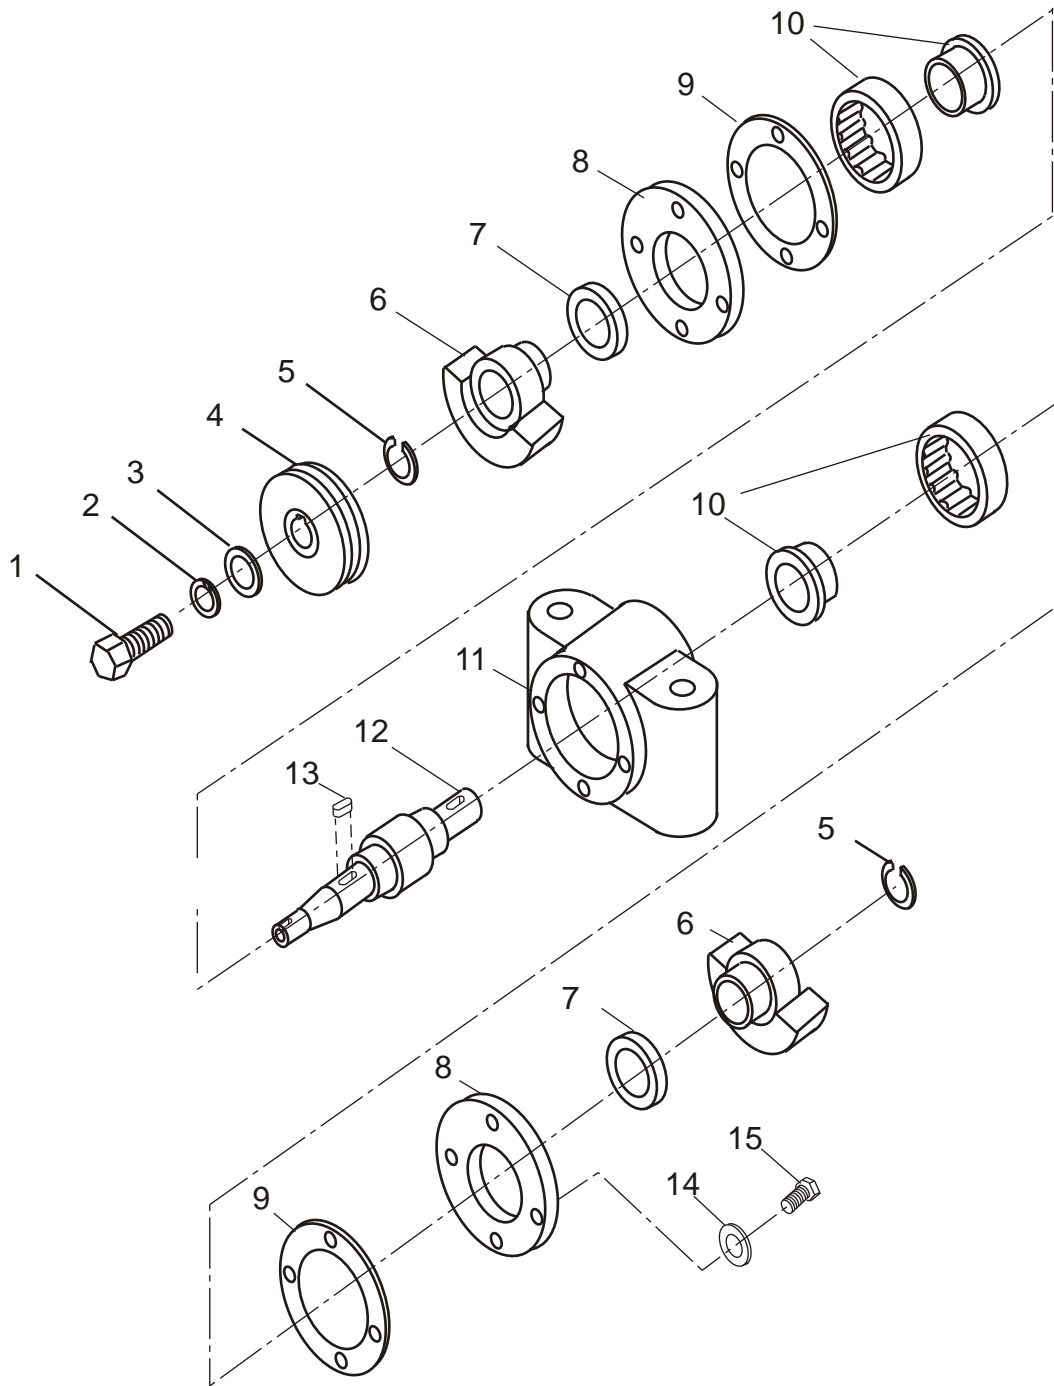

VP93 Vibratory

No.	Parts
VP93-v01	Hexagonal bolt M8x15
VP93-v02	Washer, lock M8
VP93-v03	Washer, plate M8
VP93-v04	Pulley /vibrator
VP93-v05	Stop ring
VP93-v06	Ecc. Rotator
VP93-v07	Grease seal
VP93-v08	Case cover/pulley
VP93-v09	Packing
VP93-v10	Bearing 42306
VP93-v11	Vibrating case
VP93-v12	Rotary shaft
VP93-v13	Key 6x6x25
VP93-v14	Washer, lock M6
VP93-v15	Socket head bolt M6x20