

DOSKO

M2961000D

MODEL NUMBER: 2961000, 2961010,
2961020, 2961060

SERIAL NUMBER: _____

Owner's Manual

Instructions for Operation, Maintenance

Stump and Root Grinder

2961000 (337-13H) 2961010 (357-13HE)
2961020 (620-20HE) 2961060 (620-25KE)

Your Dosko grinder is intended for outdoor-use only and can be used to remove many tree stumps and exposed root systems close to ground level. By moving the blade in sweeping movements laterally over the top and front of the stump, you can gradually grind it away. Make sure you completely read and understand this manual before using the grinder for the first time.

WARNING

READ and UNDERSTAND this manual completely before using the grinder! Failure to properly operate, and maintain this grinder could result in *serious injury or death* to the operator or bystanders.

All machines have hazards associated with their operation. This stump grinder has certain special hazards, which you must be aware of. As an operator or owner you have a duty to be aware of these hazards and know preventive measures to take to avoid them. When reading this manual pay particular attention to avoiding these hazards.

In particular, be aware of the following:

- **Know location of buried electrical and other utility lines.**
- **Do not allow children or untrained adults to operate.**
- **Wear eye protection and other personal protection against flying rocks and debris.**
- **Check that cutter wheel teeth are secured, sharp and not missing.**
- **Do not operate if operator presence bar fails to stop engine upon release.**
- **Make sure no children or bystanders are within 75' (feet) of stump grinding operation.**
- **Protect cars, windows and other objects within 75' from flying debris.**
- **Be prepared for machine "kickback" when initially contacting the stump.**
- **Be aware of potential for carbon monoxide (CO) poisoning.**
- **Prevent fires/explosions from fueling.**
- **Do not attempt to perform adjustments, declog or clean unit while engine is running.**
- **Avoid burns from engine or hot exhaust.**
- **Avoid using in wet or icy conditions where falls may occur.**

Details about these hazards are found throughout the manual and are summarized at the end of the manual under "Important Safety Information."


STOP!

ADD ENGINE OIL: Your stump grinder comes fully assembled and requires only that you add engine oil to crankcase and fuel to tank.

INSPECT COMPONENTS: Closely inspect to make sure no components are missing or damaged. See the "Receiving Your Unit" section for instructions on whom to contact to report missing or damaged parts.

Any Questions, Comments, Problems, or Parts Orders
Call your dealer or Dosko Customer Service 1-800-822-0295

M2961000 Exploded View – Rev D

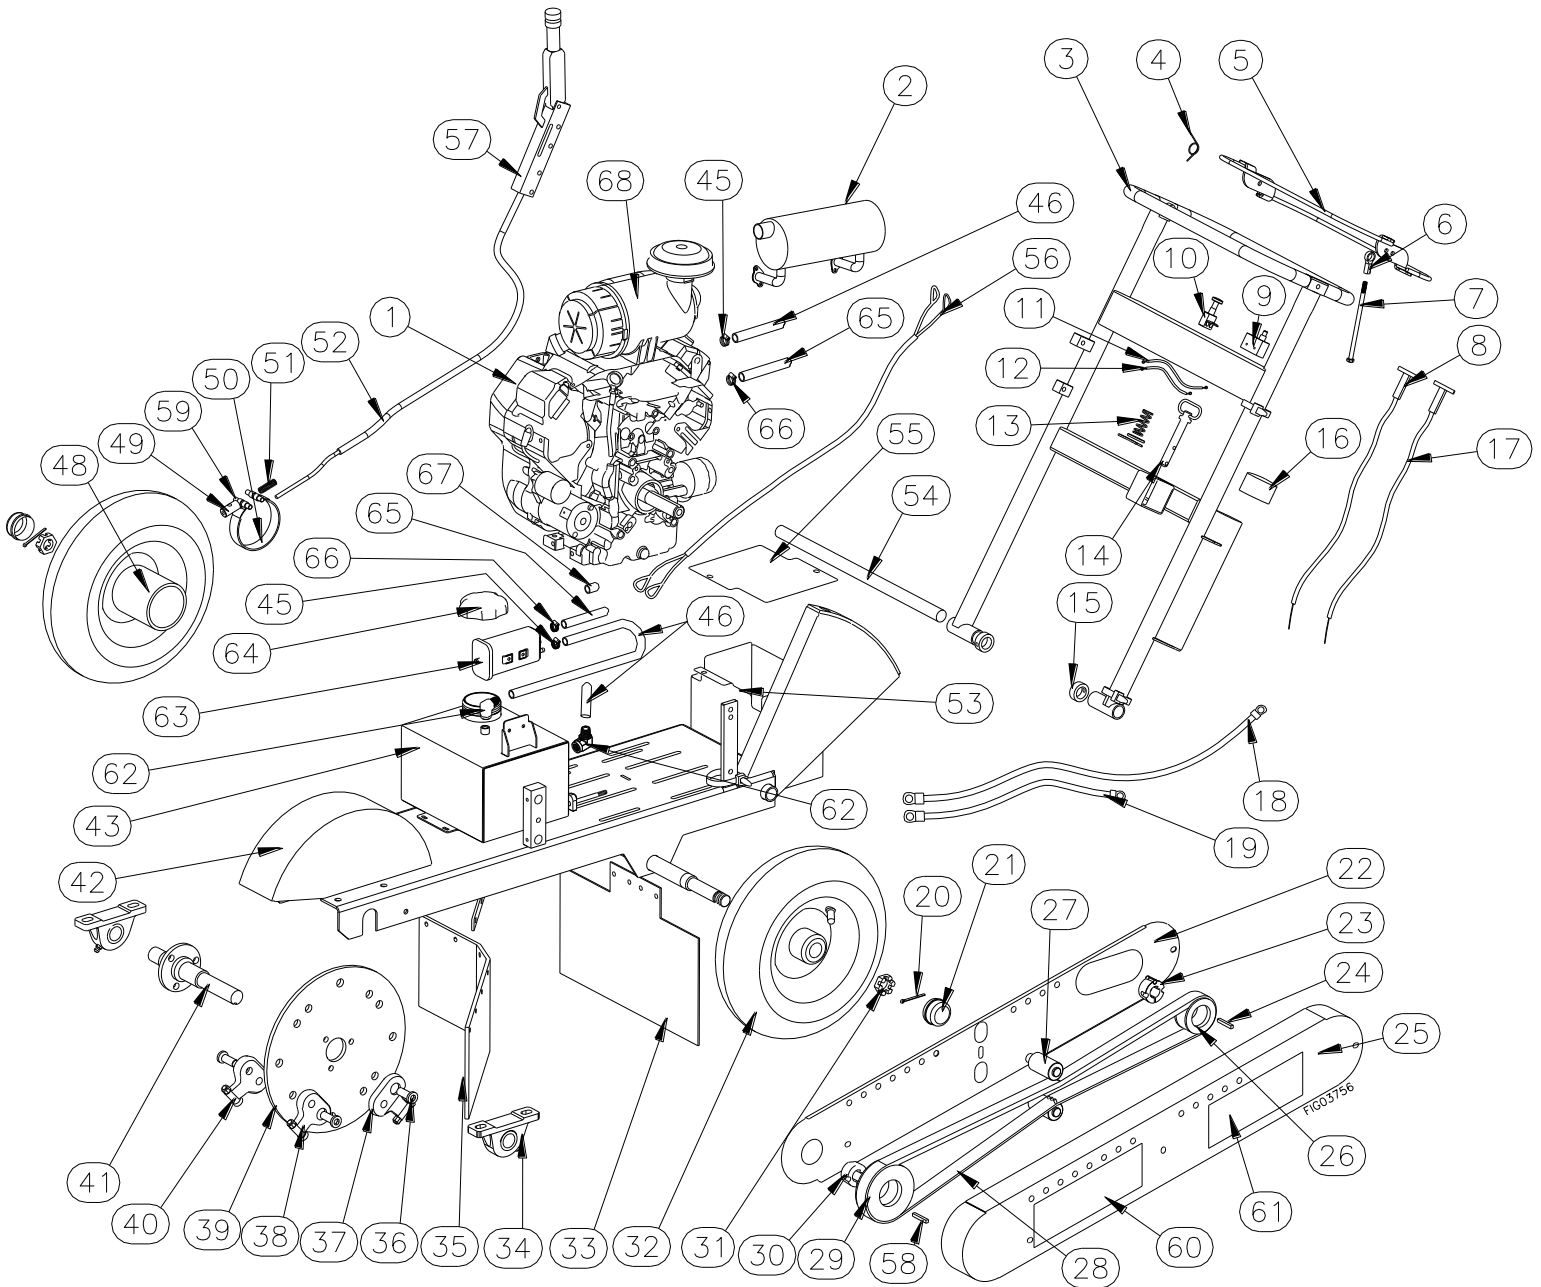

M2961000 Parts List – Rev D

Item	Part #	Description	Qty	Model	Item	Part #	Description	Qty	Model
1	601091	GX390 Honda	1	2961000	32	777799	Wheel	1	All
	601092	GX390 Estart Honda		2961010	33	783550	End flap	1	All
	783896	GX630 Honda		2961020	34	783556	Pillow block bearing	2	All
	784704	25hp Kohler		2961060	35	783551	Chute flap	1	All
2	785692	Muffler	1	2961020	36	783555	Lo-pro pocket bolt	8	All
	784059	Muffler canister		2961060	37	784165	500 series straight pocket	4	2961000
3	785138	Handle	1	All		784166	700 series straight pocket		2961010
4	783924	Spring	1	All	38	783557	500 series tooth	2961020	
5	783493	Operator presence handle bar	1	All		783558	700 series tooth	2961060	
					6	782399	Ball joint rod	1	All
7	783945	Linkage	1	All					
					8	784207	Throttle cable	1	2961020
9	783545	Microswitch	1	All					
					10	786073	On/off switch w/ black knob	1	2961000
11	783285	8" Lead wire, green	1	2961010					
					12	783284	6" Lead wire, green	1	2961020
13	783539	2" Spring	1	All					
					14	783774	4" Hitch pin	1	All
15	783538	Lock collar	2	All					
					16	783815	Black vinyl cap	1	All
17	784208	Choke cable	1	2961020					
					18	32839	43" Battery cable (red)	1	All
19	777108	24" Battery cable (blk)	1	All					
					20	82140	Cotter pin	2	All
21	124A	Dust cap	2	All					
					22	785134	Inner belt guard	1	All
23	783563	Bushing, 1"	1	2961000					
				24	82143	1/4" x 1-3/4" key	1	2961010	55
25	785136	Outer belt guard	1					2961020	
				26	783562	3" Sheave, 3 groove	1	2961000	57
27	784052	3.35" Sheave, 4 groove	1					2961010	
				28	783552	Idler bearing	2	All	59
29	783561	Belt, 3 groove	1					2961000	
				30	784056	Belt, 4 groove	1	2961010	61
31	783564	4.75" Sheave, 3 groove	1					2961020	
				32	784054	4.75" Sheave, 4 groove	1	2961010	63
33	783565	Bushing, 1-3/16"	1					All	
				34	783790	3/4" Slotted nut	2	All	65
35	783565	Bushing, 1-3/16"	1					All	
				36	783790	3/4" Slotted nut	2	All	67
37	783565	Bushing, 1-3/16"	1					All	
				38	783790	3/4" Slotted nut	2	All	69
39	783565	Bushing, 1-3/16"	1					All	
				40	783565	Bushing, 1-3/16"	1	All	71
41	783565	Bushing, 1-3/16"	1					All	
				42	783565	Bushing, 1-3/16"	1	All	73
43	783565	Bushing, 1-3/16"	1					All	
				44	783565	Bushing, 1-3/16"	1	All	75
45	783565	Bushing, 1-3/16"	1					All	
				46	783565	Bushing, 1-3/16"	1	All	77
47	783565	Bushing, 1-3/16"	1					All	
				48	783565	Bushing, 1-3/16"	1	All	79
49	783565	Bushing, 1-3/16"	1					All	
				50	783565	Bushing, 1-3/16"	1	All	81
51	783565	Bushing, 1-3/16"	1					All	
				52	783565	Bushing, 1-3/16"	1	All	83
53	783565	Bushing, 1-3/16"	1					All	
				54	783565	Bushing, 1-3/16"	1	All	85
55	783565	Bushing, 1-3/16"	1					All	
				56	783565	Bushing, 1-3/16"	1	All	87
57	783565	Bushing, 1-3/16"	1					All	
				58	783565	Bushing, 1-3/16"	1	All	89
59	783565	Bushing, 1-3/16"	1					All	
				60	783565	Bushing, 1-3/16"	1	All	91
61	783565	Bushing, 1-3/16"	1					All	
				62	783565	Bushing, 1-3/16"	1	All	93
63	783565	Bushing, 1-3/16"	1					All	
				64	783565	Bushing, 1-3/16"	1	All	95
65	783565	Bushing, 1-3/16"	1					All	
				66	783565	Bushing, 1-3/16"	1	All	97
67	783565	Bushing, 1-3/16"	1					All	
				68	783565	Bushing, 1-3/16"	1	All	99
69	783565	Bushing, 1-3/16"	1					All	